

Copper Cap Raised Bed

3' x 3' and 3' x 6'

GARDENERS
SUPPLY COMPANY

1-800-876-5520 • gardeners.com
info@gardeners.com

Parts List, 3' x 3'

- (4) 3' SIDES
- (4) CORNER POSTS
- (4) COPPER CAPS
- (8) NAILS (taped to CAPS)
- (16) PHILLIPS SCREWS

Parts List, 3' x 6'

- (2) 3' SIDES
- (2) 6' SIDES
- (4) CORNER POSTS
- (4) COPPER CAPS
- (8) NAILS (taped to CAPS)
- (16) PHILLIPS SCREWS

Tools Required

- Phillips screwdriver
- Hammer

Assembly

1. Choose a location, clear the site of sod and weeds, and make it as level as possible.
2. Place a COPPER CAP over each CORNER POST and attach with NAILS.
3. Locate the aluminum brackets that are mounted on the interior face and flush with the bottom edge of each SIDE. Place that bottom edge on the ground flush with the bottom of a CORNER POST (Fig. 1). Attach each CORNER POST to two SIDES by inserting the PHILLIPS SCREWS through the pre-drilled holes in each aluminum bracket and into the CORNER POSTS. Be sure to enter the wood straight, rather than at an angle, and tighten each screw fully.

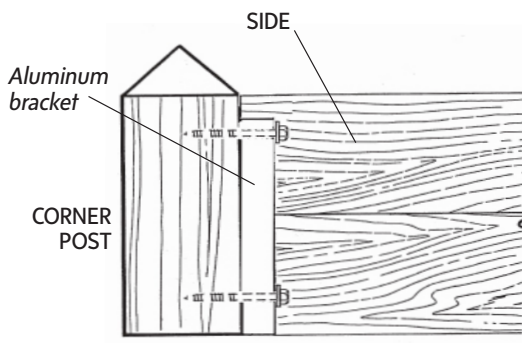


Figure 1: Bottom edges of aluminum bracket, SIDE and CORNER POST should align

4. Repeat step 3 until all four SIDES are attached to CORNER POSTS.
5. Place the assembled bed in the site you have cleared and fill it with soil. For best results, mix in plenty of organic matter, such as aged manure or compost. You are now ready to begin planting!

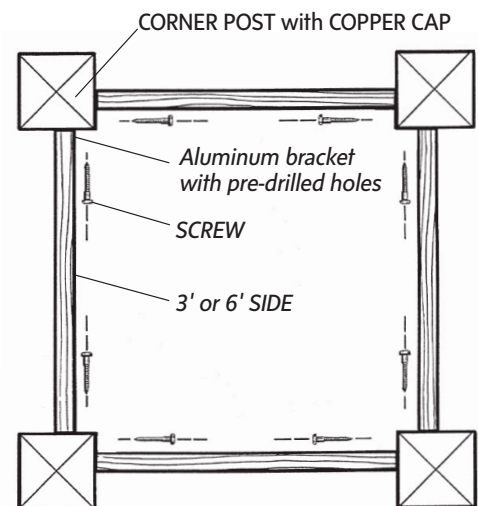


Figure 2: Assembled Copper Cap Raised Bed (top view)

For more great gardening products and tools — and gardening advice — visit us at gardeners.com

8% of our profits go back to our communities.
Learn more at gardeners.com/force-for-good

